



1. REMOVE REAR WIPER BLADE ASSEMBLY

- a. Rotate and remove the cap as described in the "REMOVE" procedures.
- b. Raise the arm and blade.

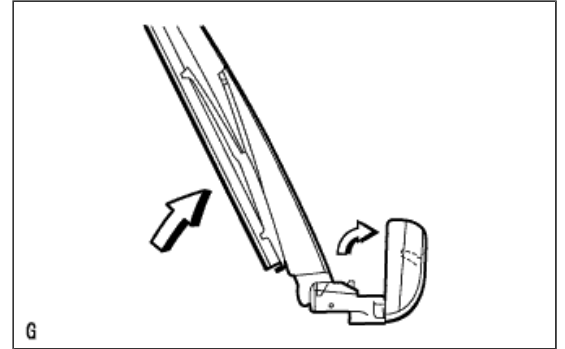


- c. Raise the wiper blade to the position where the claw detach with a "click" sound, as shown in the illustration.

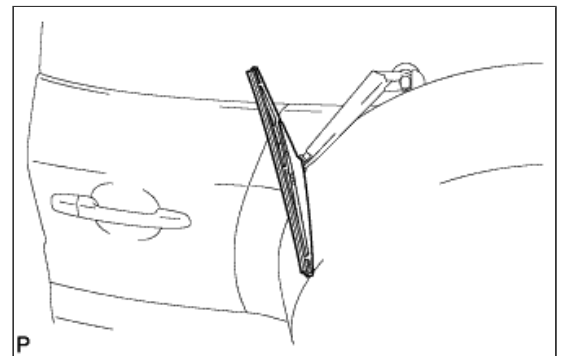

NOTICE:

Be careful not to damage the claw.

- d. Pull the wiper blade straight toward the left side of the vehicle to remove it from the wiper arm.

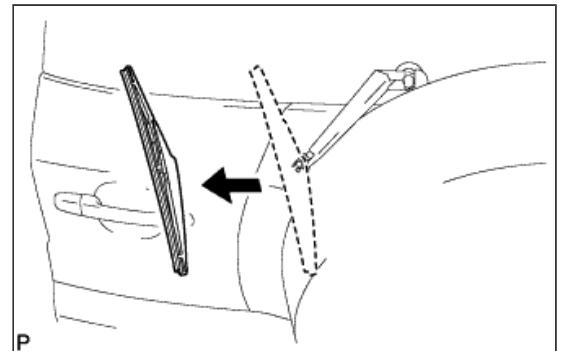

NOTICE:

Do not fold the wiper arm with the wiper blade removed. The arm tip may damage the back door glass surface.

2. REMOVE REAR WIPER RUBBER


- a. Lift and pull the end of the wiper rubber protruding from the blade stopper as shown in the illustration.

NOTICE:

Do not forcibly pull out the wiper rubber. The backing plates will be deformed or the blade claws will be damaged.

HINT:

Lightly pushing the rubber between the ends and middle will allow it to be removed more easily.

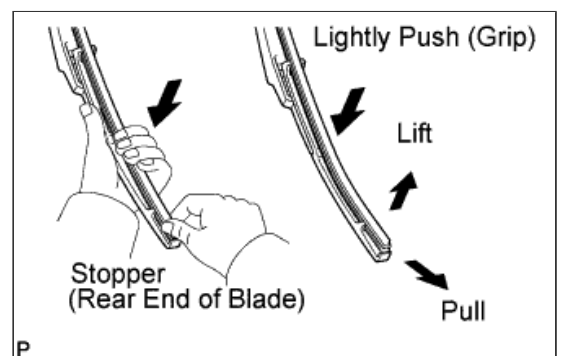


REAR WIPER RUBBER > INSTALLATION

1. INSTALL REAR WIPER RUBBER


- a. Install the No. 1 and No. 2 backing plates as shown in the illustration.

NOTICE:


Install the backing plates facing the correct direction.

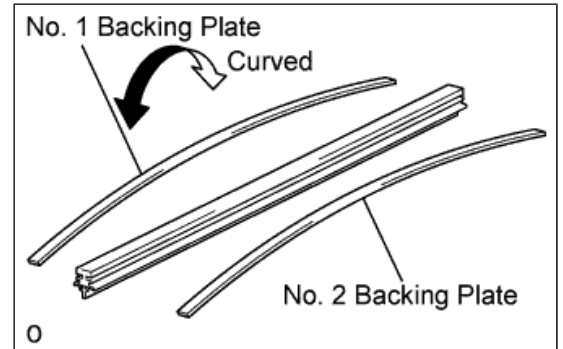

- b. Insert the wiper rubber from the front end of the wiper blade to the rear end through the second claw.
- c. After pushing the wiper rubber through the rear end claw, allow it to stick out from the rear end stopper.

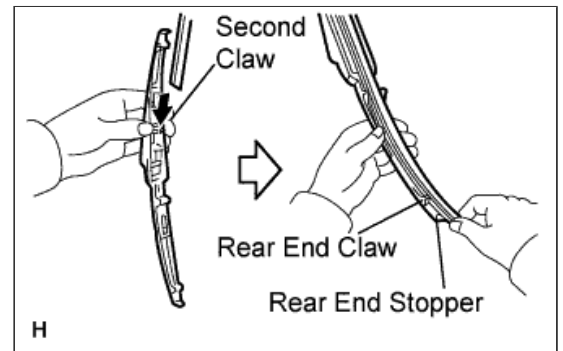


- d. Slide the wiper rubber through the front end claw.

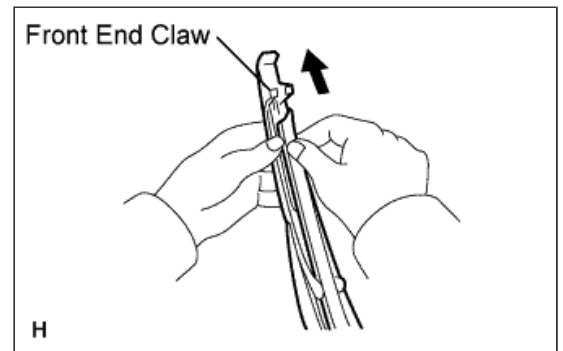

2. INSTALL REAR WIPER BLADE ASSEMBLY

- a. Push the wiper blade straight toward the right side of the vehicle to install it to the wiper arm.

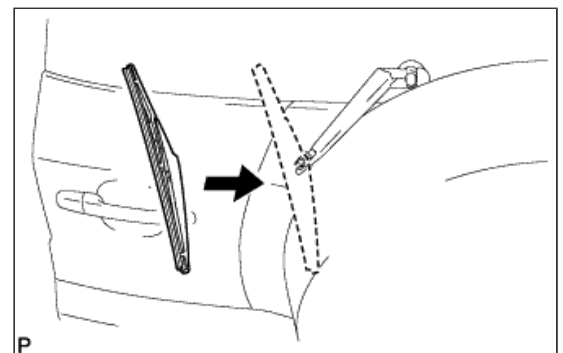

- b. Lower the arm and blade.
- c. Rotate and install the cap.

